



Childproofing Your Home - 12 Safety Devices to Protect Your Children

About 2-1/2 million children are injured or killed by hazards in the home each year. The good news is that many of these incidents can be prevented by using simple child safety devices on the market today.

Any safety device you buy should be sturdy enough to prevent injury to your child, yet easy for you to use. It's important to follow installation instructions carefully. In addition, if you have older children in the house, be sure they re-secure safety devices. Remember, too, that no device is completely childproof; determined youngsters have been known to disable them.

You can childproof your home for a fraction of what it would cost to have a professional do it. And safety devices are easy to find. You can buy them at hardware stores, baby equipment shops, supermarkets, drug stores, home and linen stores, and through mail order catalogues.

If detectors are battery-operated, change batteries at least once a year or consider using 10-year batteries.

Typical cost of a smoke detector: less than \$10.

6 Use **Window Guards and Safety Netting** to help prevent falls from windows, balconies, decks, and landings. Window guards and safety netting for balconies and decks can help prevent serious falls.

Here are some child safety devices that can help prevent many injuries to young children. The red numbers correspond to those on the image following the text.

1 Use **Safety Latches and Locks** for cabinets and drawers in kitchens, bathrooms, and other areas to help prevent poisonings and other injuries. Safety latches and locks on cabinets and drawers can help prevent children from gaining access to medicines and household cleaners, as well as knives and other sharp objects.

Look for safety latches and locks that adults can easily install and use, but are sturdy enough to withstand pulls and tugs from children. Safety latches are not a guarantee of protection, but they can make it more difficult for children to reach dangerous substances. Even products with child-resistant packaging should be locked away, out of reach; this packaging is not childproof.

Typical cost of a safety latch or lock: less than \$2.

2 Use **Safety Gates** to help prevent falls down stairs and to keep children away from dangerous areas. Safety gates can help keep children away from stairs or rooms that have hazards in them. Look for safety gates that children cannot dislodge easily, but that adults can open and close without difficulty. For the top of stairs, gates that screw to the wall are more secure than "pressure gates."

New safety gates that meet safety standards display a certification seal from the Juvenile Products Manufacturers Association (JPMA). If you have an older safety gate, be sure it doesn't have "V" shapes that are large enough for a child's head and neck to fit into.



Typical cost of a safety gate: \$13 to \$40.

3 Use **Door Knob Covers and Door Locks** to help prevent children from entering rooms and other areas with possible dangers. Door knob covers and door locks can help keep children away from places with hazards, including swimming pools.

Be sure the door knob cover is sturdy enough not to break, but allows a door to be opened quickly by an adult in case of emergency. By

Check these safety devices frequently to make sure they are secure and properly installed and maintained. There should be no more than four inches between the bars of the window guard. If you have window guards, be sure at least one window in each room can be easily used for escape in a fire. Window screens are not effective for preventing children from falling out of windows.



Typical cost of a window guard or safety netting: \$8 to \$16.

7 Use **Corner and Edge Bumpers** to help prevent injuries from falls against sharp edges of furniture and fireplaces. Corner and edge bumpers can be used with furniture and fireplace hearths to help prevent injuries from falls or to soften falls against sharp or rough edges.

Be sure to look for bumpers that stay securely on furniture or hearth edges.

Typical cost of a corner and edge bumper: \$1 and up.

8 Use **Outlet Covers and Outlet Plates** to help prevent electrocution. Outlet covers and outlet plates can help protect children from electrical shock and possible electrocution.

Be sure the outlet protectors cannot be easily removed by children and are large enough so that children cannot choke on them.

Typical cost of an outlet cover: less than \$2.

9 Use a **Carbon Monoxide (CO) Detector** outside bedrooms to help prevent CO poisoning. A carbon monoxide (CO) detector can help prevent CO poisoning. Consumers should install CO detectors near sleeping areas in their homes. Households that should use CO detectors include those with gas or oil heat or with attached garages.

Typical cost of a carbon monoxide (CO) detector: \$30 to \$70.

10 Cut **Window Blind Cords**; use **Safety Tassels and Inner Cord**

restricting access to potentially hazardous rooms in the home, door knob covers could help prevent many kinds of injuries. To prevent access to swimming pools, door locks should be placed high out of reach of young children. Locks should be used in addition to fences and door alarms. Sliding glass doors, with locks that must be re-secured after each use, are often not an effective barrier to pools.

Typical cost of a door knob cover: \$1 and door lock: \$5 and up.

4 Use **Anti-Scald Devices** for faucets and shower heads and set your water heater temperature to 120 degrees Fahrenheit to help prevent burns from hot water. Anti-scald devices for regulating water temperature can help prevent burns.

Consider using anti-scald devices for faucets and showerheads. A plumber may need to install these. In addition, if you live in your own home, set water heater temperature to 120 degrees Fahrenheit to help prevent burns from hot water.

Typical cost of an anti-scald device: \$6 to \$30.

5 Use **Smoke Detectors** on every level of your home and near bedrooms to alert you to fires. Smoke detectors are essential safety devices for protection against fire deaths and injuries.

Check smoke detectors once a month to make sure they're working.

Stops to help prevent children from strangling in blind cord loops. Window blind cord safety tassels on miniblinds and tension devices on vertical blinds and drapery cords can help prevent deaths and injuries from strangulation in the loops of cords. Inner cord stops can help prevent strangulation in the inner cords of window blinds.

For older miniblinds, cut the cord loop, remove the buckle, and put safety tassels on each cord. Be sure that older vertical blinds and drapery cords have tension or tie-down devices to hold the cords tight. When buying new miniblinds, verticals, and draperies, ask for safety features to prevent child strangulation.

You can get window blind cord safety information and free tassels by calling 1-800-506-4636 or visiting www.windowcoverings.org

11 Use **Door Stops and Door Holders** to help prevent injuries to fingers and hands. Door stops and door holders on doors and door hinges can help prevent small fingers and hands from being pinched or crushed in doors and door hinges.

Be sure any safety device for doors is easy to use and is not likely to break into small parts, which could be a choking hazard for young children.

Typical cost of a door stop and door holder: less than \$4.

12 Use a **Cordless Phone** to make it easier to continuously watch young children, especially when they're in bathtubs, swimming pools, or other potentially dangerous areas.

Cordless phones help you watch your child continuously, without leaving the vicinity to answer a phone call. Cordless phones are especially helpful when children are in or near water, whether it's the bathtub, the swimming pool, or the beach.

Typical cost of a cordless phone: \$30 and up.





Shopping for Safety Devices

You can childproof your home for a fraction of what it would cost to have a professional do it. And safety devices are easy to find. You can buy them at hardware stores, baby equipment shops, supermarkets, drug stores, home and linen stores, and through mail order catalogues.

Here are some typical costs for child safety devices:

- SAFETY LATCH or LOCK** - less than \$2.
- SAFETY GATE** - \$13 to \$40.
- DOOR KNOB COVER** - \$1 and **DOOR LOCK** - \$5 and up.
- ANTI-SCALD DEVICE** - \$6 to \$30.
- SMOKE DETECTOR** - less than \$10.
- WINDOW GUARD or SAFETY NETTING** - \$8 to \$16.
- CORNER and EDGE BUMPER** - \$1 and up.
- OUTLET COVER** - less than \$2.
- CARBON MONOXIDE (CO) DETECTOR** - \$30 to \$70.
- WINDOW BLIND CORD SAFETY TASSELS** - free by calling 1-800-506-4636.
- DOOR STOP and DOOR HOLDER** - less than \$4.
- CORDLESS PHONE** - \$30 and up.

THIS BROCHURE BROUGHT TO YOU BY:



U.S. CONSUMER PRODUCT SAFETY COMMISSION
Washington, DC 20207
Web site: www.cpsc.gov
Toll-free hotline: 1-800-638-2772

The U.S. Consumer Product Safety Commission (CPSC) is a federal agency that helps keep families and children safe in and around their homes.

For more information, call the CPSC's toll-free hotline at 1-800-638-2772 or visit its website at <http://www.cpsc.gov>.



For All the Commitments You Make®

CNA is one of the world's premier insurance organizations. Headquartered in Chicago, CNA is a leading insurer, serving individuals and businesses with a broad range of insurance products and insurance-related services.

Since 1897, CNA has built on a foundation of financial strength, stability and commitment to customers and business partners. CNA is the registered service mark and trade name of CNA Financial Corporation. For more information, visit its website at <http://www.cna.com>.

[Send the link for this page to a friend!](#) Consumers can obtain this publication and additional publication information from the [Publications section](#) of CPSC's web site or by sending your publication request to info@cpsc.gov.

This document is in the public domain. It may be reproduced without change in part or whole by an individual or organization without permission. If it is reproduced, however, the Commission would appreciate knowing how it is used. Write the U.S. Consumer Product Safety Commission, Office of Information and Public Affairs, 4330 East West Highway, Bethesda, MD 20814 or send an e-mail to info@cpsc.gov.

The U.S. Consumer Product Safety Commission is charged with protecting the public from unreasonable risks of serious injury or death from more than 15,000 types of consumer products under the agency's jurisdiction. Deaths, injuries and property damage from consumer product incidents cost the nation more than \$700 billion annually. The CPSC is committed to protecting consumers and families from products that pose a fire, electrical, chemical, or mechanical hazard or can injure children. The CPSC's work to ensure the safety of consumer products - such as toys, cribs, power tools, cigarette lighters, and household chemicals - contributed significantly to the 30 percent decline in the rate of deaths and injuries associated with consumer products over the past 30 years.

To report a dangerous product or a product-related injury, call CPSC's hotline at (800) 638-2772 or CPSC's teletypewriter at (800) 638-8270, or visit CPSC's web site at www.cpsc.gov/talk.html. To join a CPSC email subscription list, please go to www.cpsc.gov/cpsclist.asp. Consumers can obtain this release and recall information at CPSC's Web site at www.cpsc.gov.

[Consumer Safety \(Home\)](#) | [About CPSC](#) | [Library](#) | [Business](#)